MIDMARK® Installation Instructions

002-0629-00 Headlock Switch Bypass Kit
Used on 411(-009 thru -014 and -016 thru -018) Tables with Headlock Switch Feature

KIT COMPONENTS

Part Number	Description	Qty.
015-1263-00	Jumper, Main PC Board	1
015-0013-00	Cable Tie	1
003-1052-00	Installation Instructions	1

REQUIRED TOOLS

Phillips Screwdriver

IMPORTANT INSTRUCTIONS

Provides a means to bypass the headlock switch which some table owners do not want. In some instances, the switch trips even though there is no collision situation, resulting in a nuisance condition.

INSTALLATION (1)

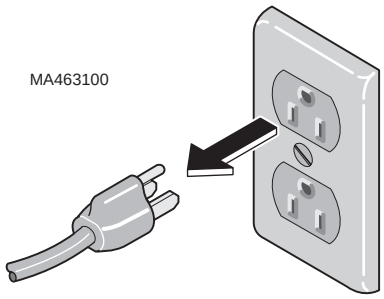

DANGER
Unplug table from electrical outlet.

INSTALLATION (2)

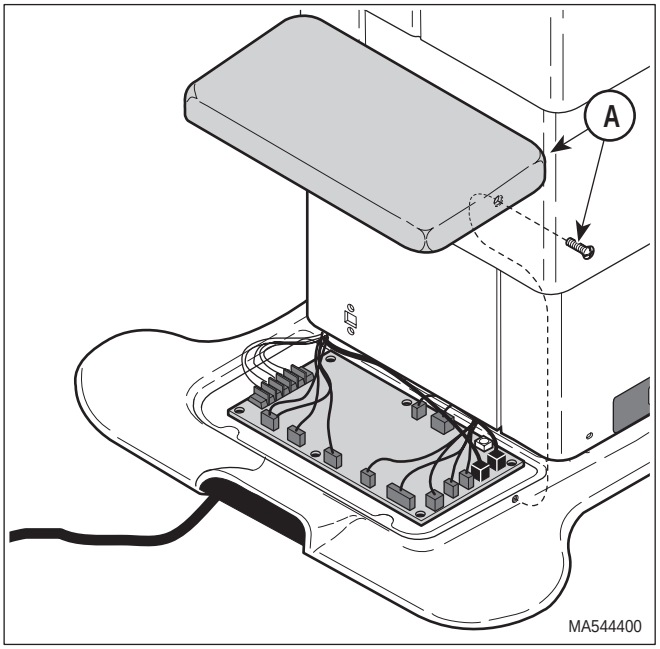

A. Remove two screws and PC board cover from base casting.

© Midmark Corporation - 1998

INSTALLATION (3)

NON-PROGRAMMABLE TABLES **PROGRAMMABLE TABLES**

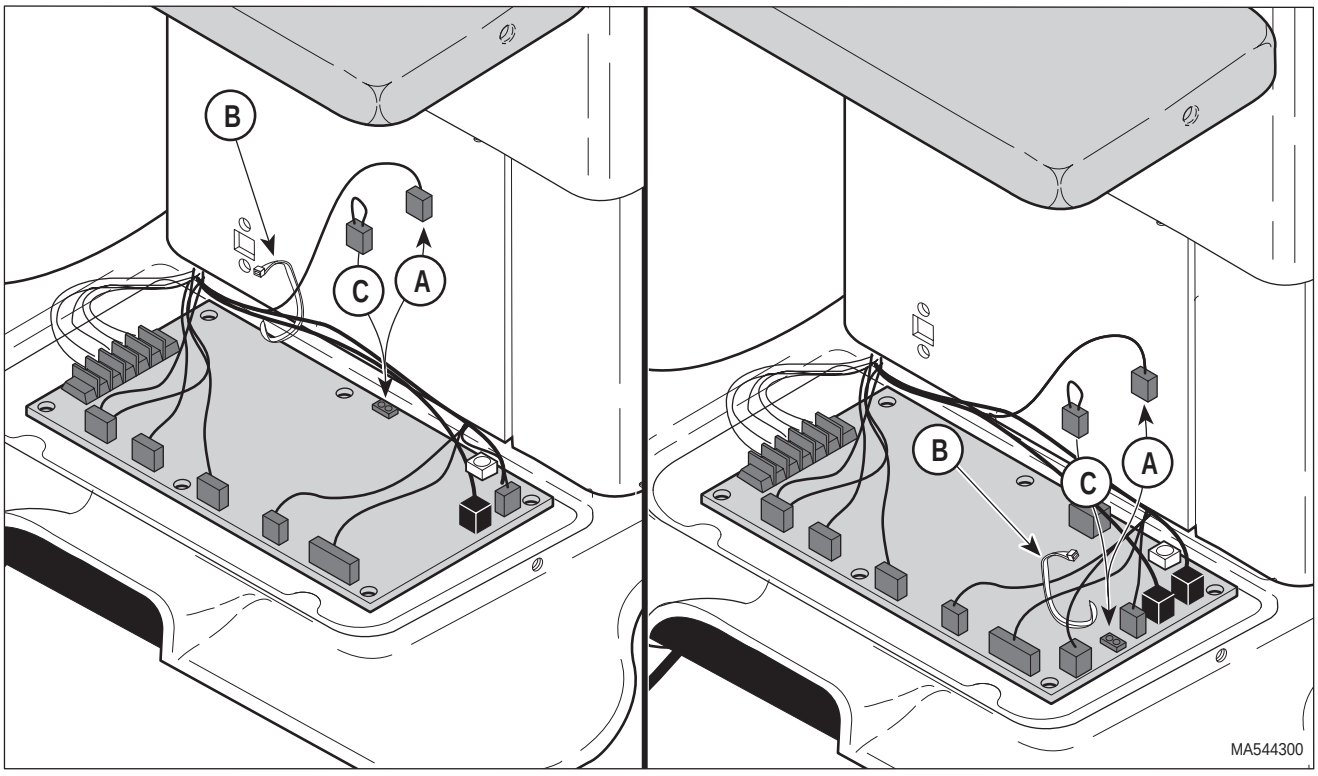

A. Disconnect headlock wiring harness from headlock connector on PC board.

B. Using supplied cable tie, tie headlock wiring harness to adjacent wiring harnesses so it is held away from the PC Board.

C. Install supplied jumper on headlock connector on PC board.

INSTALLATION (4)

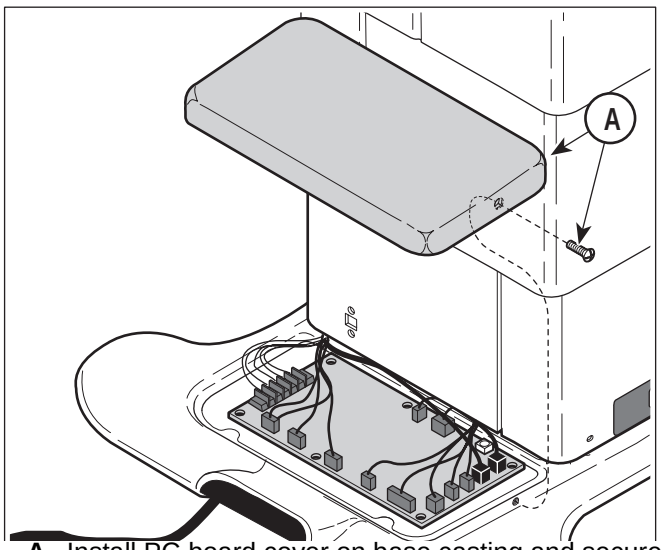

A. Install PC board cover on base casting and secure with two screws.

© Midmark Corporation - 1998